


FREEZESTAT **MODEL-TCT** **TEMPERATURE CONTROLLER AND TIMER**

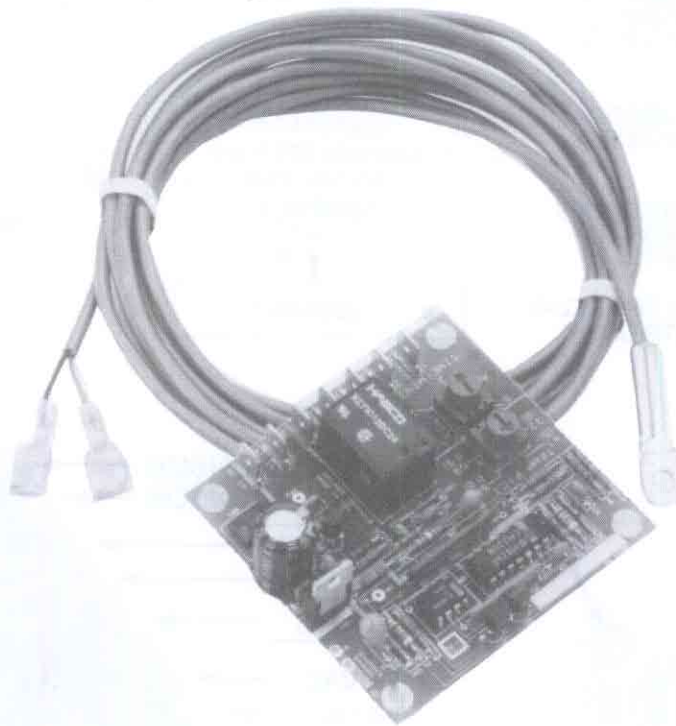

AA

FEATURES

- Solid State for Reliability
- Temperature Adjustment Range 30° F to 58°F (-1°C to 140°C)
- Time Delay Adjustment Range 1 Minute to 5 Minutes
- 10A @ 240Vac (Resistive) Relay Contact Output
- Quick Connect Terminals For Easy, Quick Installation
- Thermistor With 10 Foot Cable (Standard)
- Ambient Temperature -30°F to 140°F
- Input Power 24Vac 50/60 Hz


TYPICAL APPLICATION

Air make up systems, used to ensure that discharge air is above a preset temperature after a preset time. Temperature and time delay are individually adjustable. A thermistor sensor monitors discharge air. If the temperature of the air does not exceed the temperature

setting of the unit before the time delay setting, relay contacts change state to shut the system down. Can also be used in low limit applications to signal burner turn on.



TCT CONTROL LOGIC OPERATION

1. THE TCT DOES NOT HAVE ANY POWER AND THE RELAY IS NOT ENERGIZED (NC AND C CONTACTS ARE MADE), GO TO STEP 2.
2. POWER IS APPLIED TO THE TCT GO TO STEP 3.
3. IF THE TEMPERATURE SENSOR EXCEEDS THE SETPOINT, GO TO STEP 6, IF NOT, GO TO STEP 4.
4. THE PRESELECTED TIMING STARTS (NC & C REMAIN CLOSED DURING TIMING), GO TO STEP 5.
5. IF AFTER THE TIMING HAS COMPLETED AND THE SENSOR TEMPERATURE IS ABOVE THE SETPOINT, GO TO STEP 6, IF NOT, GO TO STEP 8.
6. THE TCT TIMER IS RESET TO ZERO (NC & C CONTACTS REMAIN CLOSED), GO TO STEP 7.
7. IF THE SENSOR TEMPERATURE DROPS BELOW THE SETPOINT, GO BACK TO STEP 4, IF NOT, WAIT AT STEP 7.
8. THE TCT IS LOCKED-OUT AND THE RELAY ENERGIZES (NC & C CONTACTS OPEN, NO & C CONTACTS CLOSE).

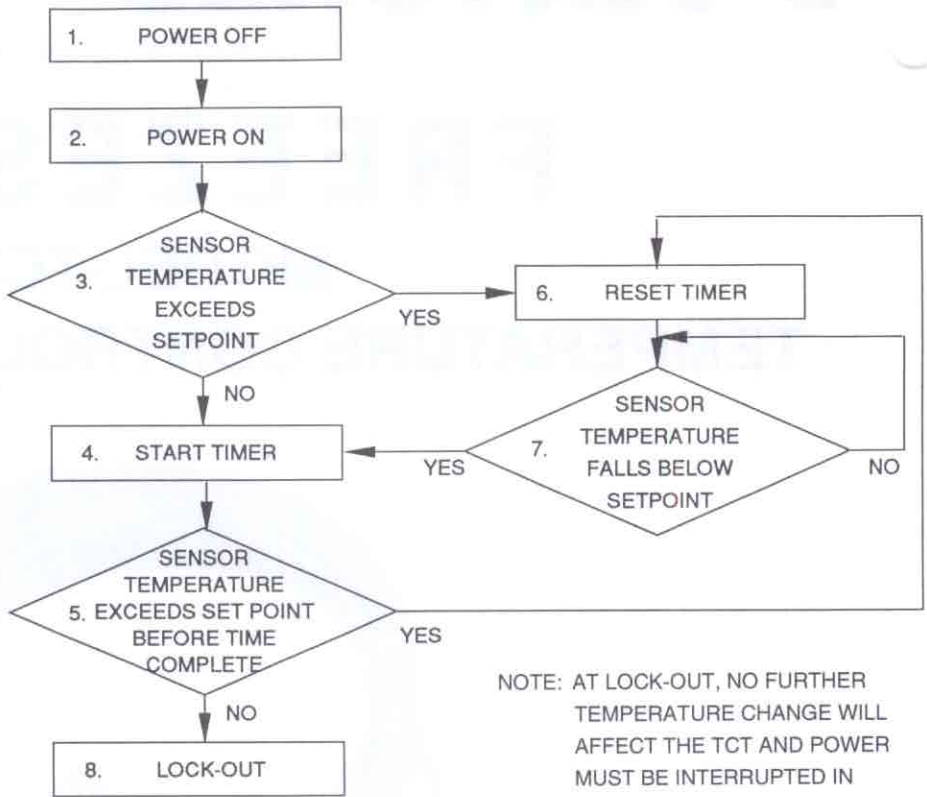

NOTE: AT LOCK-OUT, NO FURTHER TEMPERATURE CHANGE WILL AFFECT THE TCT AND POWER MUST BE INTERRUPTED IN ORDER TO RESTART AT STEP 1.

PHYSICAL DIMENSIONS

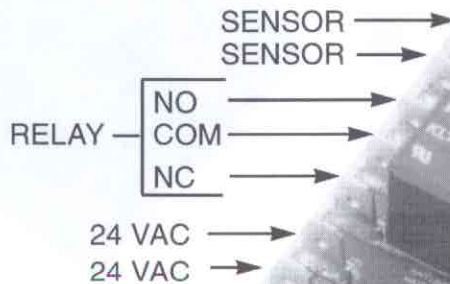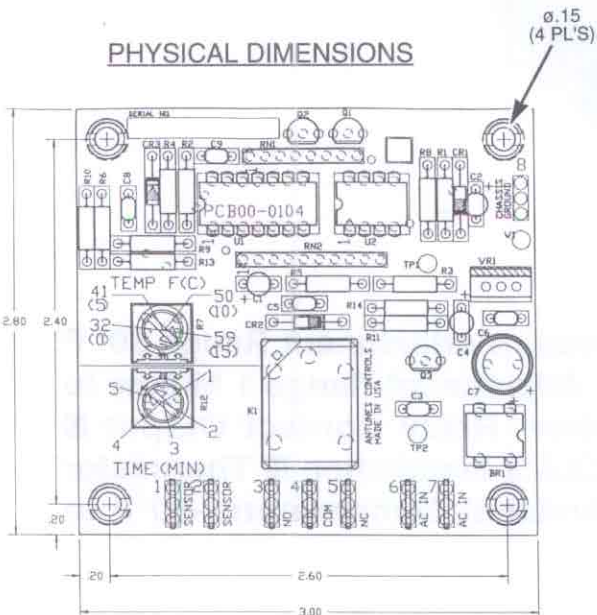

CONNECTION DIAGRAM

ANTUNES CONTROLS

DIVISION OF A.J. ANTUNES & CO.

180 KEHOE BLVD., P.O. BOX 87700, CAROL STREAM, IL 60188 • PHONE 630-784-1000 • 1-800-253-2991 • FAX 630-784-1651
www.antunescontrols.com